TRUTECH

WIDESCREEN
32" THIN LCD MONITOR

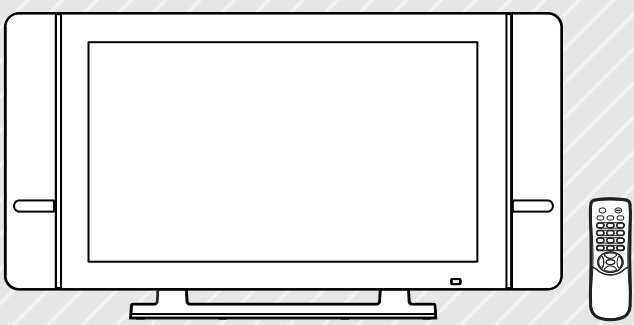

HOW IT WORKS

SAFETY PRECAUTIONS

*** SEE REAR OF UNIT FOR GRAPHIC SYMBOLS ***

The lightning flash with an arrowhead within a triangle alerts you to uninsulated dangerous voltage within the product's enclosure that could cause an electric shock.

The exclamation point within a triangle alerts you to the presence of important operating, maintenance and servicing instructions in this user's manual.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. DO NOT PLACE OBJECTS FILLED WITH LIQUIDS ON OR NEAR THIS UNIT.

CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

The symbol for Class II (Double Insulation)

PLACEMENT INFORMATION

- Do not use this unit in places which are extremely hot, cold, dusty, or humid.
- Do not restrict the air flow of this unit by placing it somewhere with poor air flow, by covering it with a cloth, or by placing it on bedding or carpeting.

SAFETY INFORMATION

- When connecting or disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC cord.

CONDENSATION INFORMATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit. When there is condensation inside the unit, the unit may not function normally. Let the unit stand for 1-2 hours before turning the power on, or gradually heat the room and let the unit dry before use.

FCC INFORMATION

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could avoid the user authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class FCC limits.

WARNING: Should any problems occur, disconnect the AC cord and refer servicing to a qualified technician.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacture.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

SAFELY REMOVING THE UNIT FROM THE BOX

For your safety, and to protect the fragile LCD screen, it's best to use 2 people to remove the unit from the box.

1. Use the cardboard holders on either side of the unit to remove it from the box.
2. Remove the cardboard; however, keep the wrapping on the unit to protect it while moving.
3. Gently place the unit in its desired location, making sure there is ample space on all sides, as shown in the attached diagram.

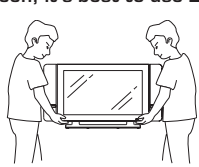

PRECAUTION WHEN MOVING THE UNIT

When transporting the unit, never carry it by holding onto the speakers. Be sure to always move the television with two people, supporting it with two hands, one on each side of the display.

SPACE REQUIREMENTS

For proper ventilation of the unit, and to avoid overheating, ensure the unit has 6" of space on either side, 8" on the top, and 6" behind, as shown in the diagram.

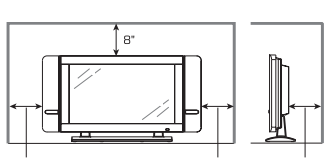

TABLE OF CONTENTS

SAFETY PRECAUTIONS 2
IMPORTANT SAFETY INSTRUCTIONS 3
REMOTE CONTROL 5
ACCESSORIES 5
REMOTE CONTROL REFERENCE GUIDE 6
UNIT REFERENCE GUIDE 7-8
CONNECTIONS 9-13
- Connecting to A/V devices (VCR, Camcorder, Game System, etc.) 9-10
- Connecting to sources with component video output (DVD - only 480i, 480p, 720p & 1080i are supported) 11
- Connecting an audio amplifier 12
- Connecting a PC 12
- Connecting the power cord 13

INSTALLATION 14
- Removing the base stand 14
- Mounting on the wall 14

USING HEADPHONES 15
MENU SETUP 16-21
- Picture menu 16
- Screen menu 17
- Sound menu 18
- Setup menu 19
  - Restore setting 19
  - Timers setting 19
  - Parental control 20
  - Closed-captioning 21
  - Noise reduction 21
- On-Screen display setting 22

TROUBLESHOOTING GUIDE 23

REMOTE CONTROL

USING THE REMOTE CONTROL

- Point the remote control at the REMOTE SENSOR located on the unit.
- When using this unit in very bright light, the infrared REMOTE CONTROL SENSOR may not work properly.
- The recommended effective distance for using the remote control is about 16 feet (5 meters).

TO CHANGE THE REMOTE CONTROL BATTERY

1. Open the battery door.
2. Insert two "AAA" batteries.

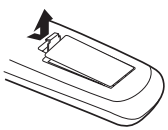



BATTERY REPLACEMENT

When the batteries become weak, the operating distance of the remote control will be greatly reduced and you will need to replace the batteries.

Note:

- If the Remote Control is not going to be used for a long time, remove the batteries to avoid damage caused by battery leakage corrosion.
- Do not mix old and new batteries. Do not mix ALKALINE, standard (CARBON-ZINC) or rechargeable (NICKEL-CADMIUM) batteries.

WARNING: Do not dispose of batteries in a fire or they may leak and/or explode.

ACCESSORIES

PLEASE LOCATE THE INCLUDED ACCESSORIES.

- To order replacement parts, please call customer service at 1-888-252-6252 or visit http://www.1800customersupport.com.

☐ Remote control (with battery) ..... x 1

Specifications and appearance are subject to change without notice.

Need More Help?
DO NOT RETURN THIS TO THE STORE
Please call Customer Service at 1-888-252-6252or
visit online help at http://www.1800customersupport.com

REMOTE CONTROL REFERENCE GUIDE

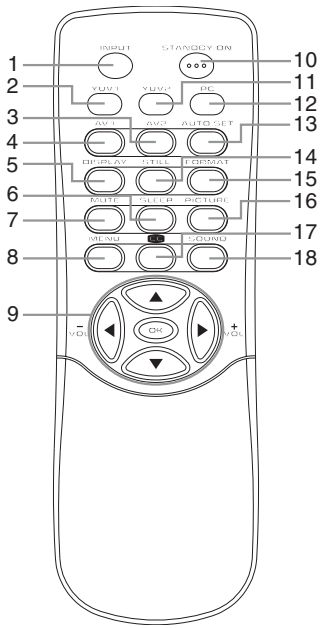

1) INPUT button
Toggle between AV1/AV2/YUV1/YUV2/PC IN.

2) YUV1 button
Press to select YUV1 (component video) mode.

3) AV2 button
Press to select AV2 mode.

4) AV1 button
Press to select AV1 mode.

5) DISPLAY button
Press to show which input you are watching (AV1/AV2/YUV1/YUV2/PC IN).

6) SLEEP button
Sets the SLEEP timer. The unit will remain ON for the time that is set, and will automatically shut off afterwards.

7) MUTE button
Press to turn off the sound.

8) MENU Button
Display and exit the menu screen.

9) Cursor (▼, ▲ , ◄, ►) buttons
Press to highlight selections on a menu screen and adjust certain settings.
OK button
Press to return to the original selection.
+ VOLUME – button
Press to adjust the volume level.

10) STANDBY/ON button
Turns the unit ON and puts the unit into STANDBY mode.

11) YUV2 button
Press to select YUV2 (component video) mode.

12) PC button
Press to select PC mode.

13) AUTO SET button
In PC mode only, press to reset the position of displayed picture and phase automatically.

14) STILL button
Press to freeze the picture on screen. To return to normal viewing, press the STILL button again.

15) FORMAT button
Press to select the picture format (Full, Normal, Zoom 1 & Zoom 2).
Note : In PC mode, only Full and Normal are available.

16) PICTURE button
Select from preset screen display settings to match the type of show you are watching (Personal, Natural, Bright, Soft).

17) CC button
Press to activate the Closed Captioning feature. This function only works on programs broadcasted with captions.

18) SOUND button
Select from preset sound settings (Personal, Normal, News, Music, Movie) to match the type of show you are watching.

UNIT REFERENCE GUIDE

TOP & FRONT VIEW

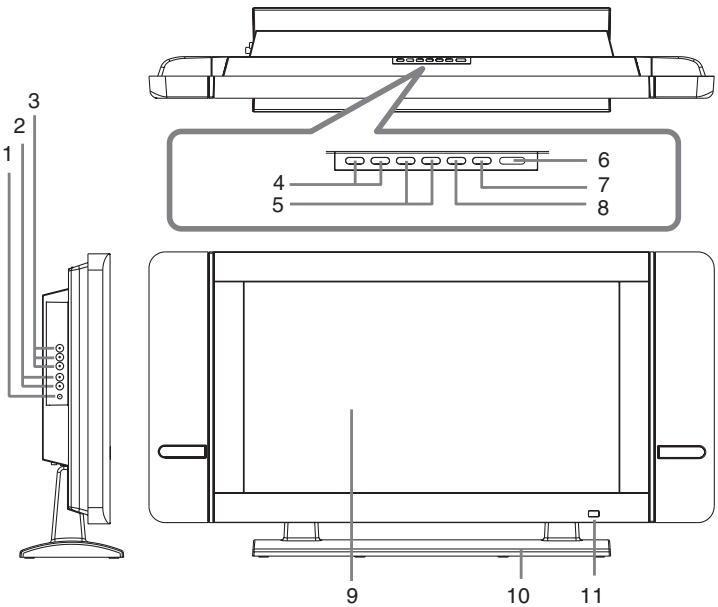

1) **HEADPHONE jack**
2) **YUV2 Audio Input Jacks (Left/Right)**
3) **YUV2 Component Video Inputs (Y/P_B/P_R)**
4) **– VOL + controls**
   Adjust the volume level and highlight selections (Left & Right) on the menu screen.
5) **▼/▲ buttons**
   Press to highlight selections (Up & Down) on the menu screen.
6) **⏻ STANDBY/ON button**
   Turns the unit on and off.
7) **MENU button**
   Enter the Setup menu.
8) **INPUT button**
   Select AV1, AV2, YUV1, YUV2, PC IN.
9) **Color LCD Screen**
10) **Removeable Stand**
11) **STANDBY indicator**
    Indicates whether the unit is ON or in STANDBY (OFF) mode.
    Light On: The unit is in STANDBY.
    Light Off: The unit is turned ON.

    Remote Control Sensor
    Do not block this sensor or the remote control will not work.

UNIT REFERENCE GUIDE

BACK & BOTTOM VIEW

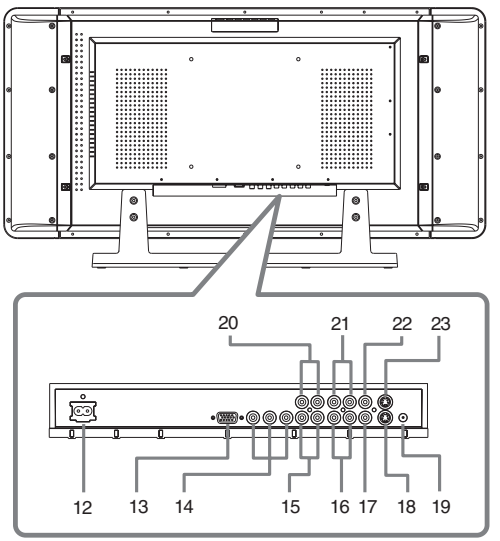

12) Power Cord
13) PC IN MONITOR/VGA jack
14) YUV-IN1 Component Video Inputs (Y/P_B/P_R)
15) YUV-IN1 Audio Input Jacks (Left / Right)
16) AV-IN2 Audio Input Jacks (Left / Right)
17) AV-IN2 Video Input jack
18) AV-IN2 S-Video Input
19) PC IN Audio Jack
20) Audio Output Jacks (Left/Right)
21) AV-IN1 Audio Input Jacks (Left / Right)
22) AV-IN1 Video Input Jack
23) AV-IN1 S-Video Input

CONNECTIONS

CONNECTING TO A/V DEVICES (VCR, Camcorder, Game System, etc.)

Connecting to Devices with an S-Video Output

To connect to A/V devices such as a VCR or camcorder:

- Connecting a VCR

Connect the right (red) and left (white) audio output from the VCR to the right (red) and left (white) input on this unit (Audio cable not included).

Connect the S-VIDEO output from the VCR to the S-VIDEO input on this unit (S-VIDEO cable not included).

Make sure you connect both audio and video from the same VCR to the same input (AV1/AV2).

Note:
Please refer to the VCR's user manual for more information.

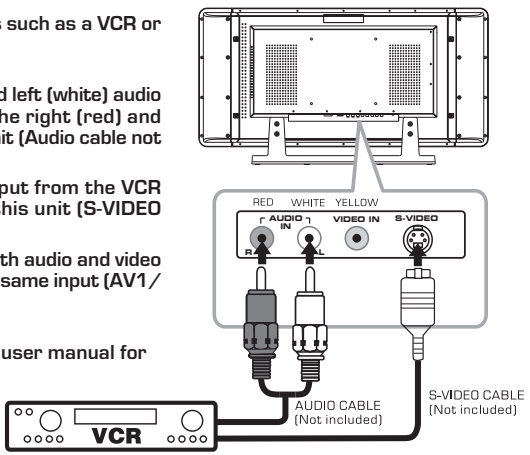

- Connecting a camcorder

Connect the right (red) and left (white) audio output from the camcorder to the right (red) and left (white) input on this unit (Audio cable not included).

Connect the S-VIDEO output from the camcorder to the S-VIDEO input on this unit (S-VIDEO cable not included).

Make sure you connect both audio and video from the same camcorder to the same input (AV1/AV2).

Note:
Please refer to the camcorder's user manual for more information.

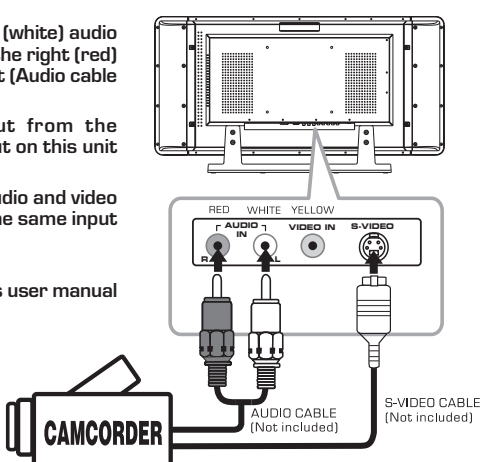

Connecting to Devices with a Composite (yellow RCA-type) Video Output

To connect to A/V devices such as a VCR or camcorder:

- Connecting a VCR

Connect the right (red) and left (white) audio output from the VCR to the right (red) and left (white) input on this unit (Audio cable not included).

Connect the video (yellow) output from the VCR to the video input on this unit (Video cable not included).

Make sure you connect both audio and video from the same VCR to the same input (AV1/AV2).

Note:
Please refer to the VCR's user manual for more information.

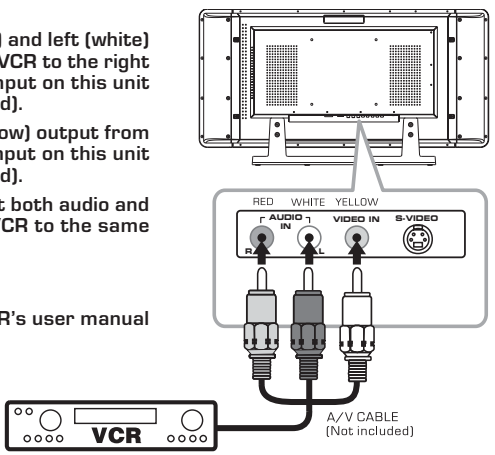

- Connecting a camcorder

Connect the right (red) and left (white) audio output from the camcorder to the right (red) and left (white) input on this unit (Audio cable not included).

Connect the video (yellow) output from the camcorder to the video input on this unit (Video cable not included).

Make sure you connect both audio and video from the same camcorder to the same input (AV1/AV2).

Note:
Please refer to the camcorder's user manual for more information.

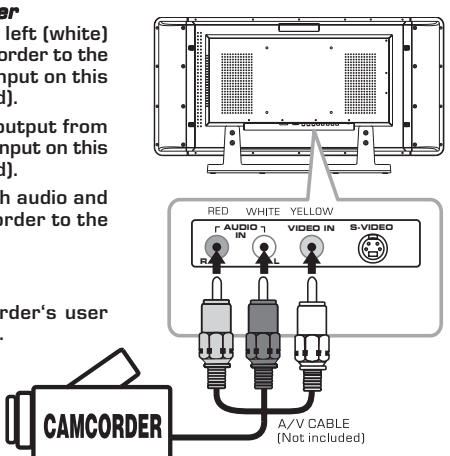

CONNECTIONS

CONNECTING TO SOURCES WITH COMPONENT VIDEO OUTPUT (DVD - only 480i, 480p, 720p & 1080i are supported)

Devices with component video output must be connected to the YUV1 input:

Connect the three video outputs (Y, Pb, Pr) from the source to the corresponding video inputs on this unit (Component video cable not included).

Connect the right (red) and left (white) audio output from the source to the right (red) and left (white) input on this unit (Audio cable not included).

Make sure you connect both audio and video from the same source to YUV1.

Note:
Please refer to the user manual for your component video source for more information and connection details.

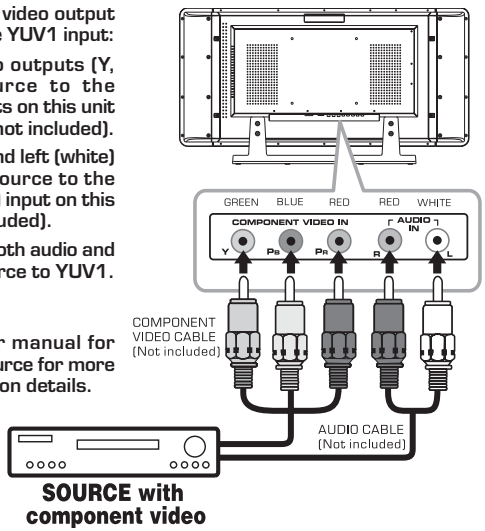

SOURCE with component video

Devices with component video output must be connected to the YUV2 input:

Connect the three video outputs (Y, Pb, Pr) from the source to the corresponding video inputs on this unit (Component video cable not included).

Connect the right (red) and left (white) audio output from the source to the right (red) and left (white) input on this unit (Audio cable not included).

Make sure you connect both audio and video from the same source to YUV2.

Note:
Please refer to the user manual for your component video source for more information and connection details.

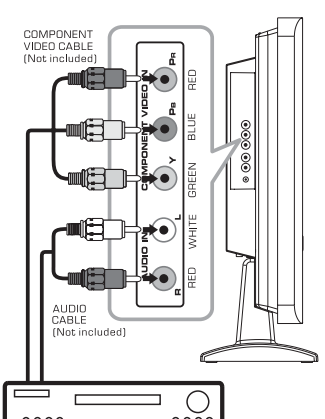

SOURCE with component video

CONNECTING AN AUDIO AMPLIFIER

This connection allows you to use an audio amplifier and external speakers.
Connect the right (red) and left (white) audio OUTPUT from this unit to the right (red) and left (white) audio INPUT on your amplifier. Refer to your amplifier's user manual for more information.

Note :
To control the audio, both the unit and the amplifier must be turned on, and the volume of the amplifier must be set above 0, or you will not hear any sound.

If you want to hear the volume of the amplifier only, press the volume – button on the unit to decrease the volume or press the MUTE button on the remote control to turn off the sound.

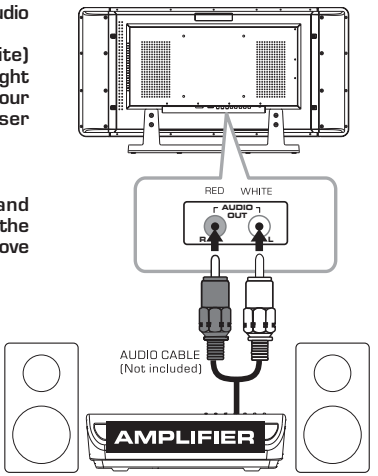

CONNECTING A PC

Connect the 15-pin D-SUB PC/VGA connector from your computer to the 15-pin D-SUB PC/VGA input on this unit using a monitor cable (not included).

Connect a stereo audio cable (not included) to the PC AUDIO IN jack on the bottom of this unit, and the other end to the AUDIO OUT jack on your computer's sound card.

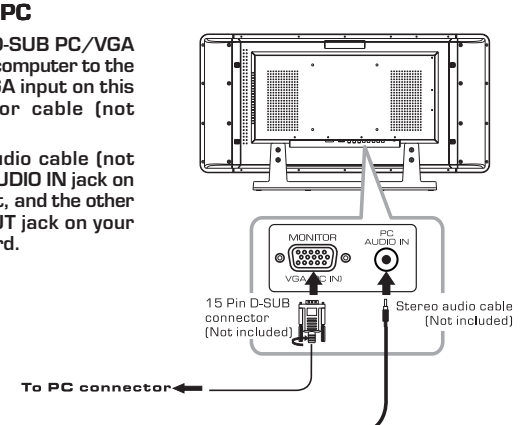

CONNECTIONS

CONNECTING THE POWER CORD

- Plug the power cord into an outlet.
- Press the **STANDBY/ON** button on top of the unit or on the remote control to turn on the unit.

Note:

- Be sure the AC power cord is disconnected and all functions are off before making connections.
- Make sure that all the components are connected correctly.
- ***To prevent electrical shock, match wide blade of plug to wide slot on outlet, and fully insert.***
- When you are not going to use the unit for a long period of time, disconnect the power cord.

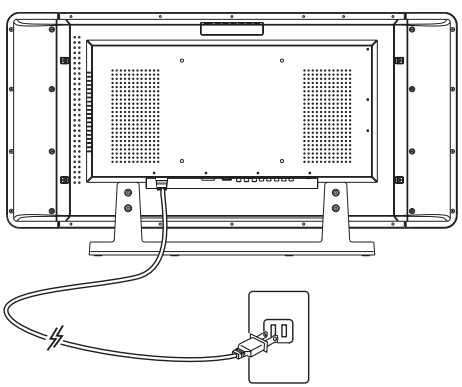

REMOVING THE BASE STAND

WARNING: The LCD Display is very fragile, and must be protected at all times when removing the base stand. Be sure that no hard or sharp objects, or anything that could scratch or damage the LCD display, come in contact with it. Do NOT place pressure on the rear of the unit at any time because the screen could crack.

1. Disconnect any cables or cords connected to the unit.
2. Lay the unit down on a flat surface, so the back side is facing up, making sure to place a soft cushioned material (such as a pillow or thick piece of foam) beneath the screen.
3. Remove the four screws and then remove the BASE STAND from the unit.

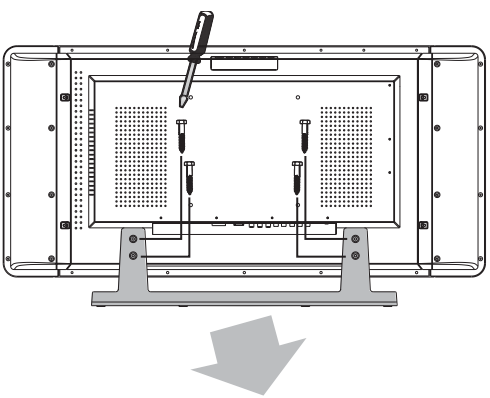

MOUNTING ON THE WALL

This unit is VESA-compliant, and is designed to be wall-mounted with a VESA-compliant 7.9" x 7.9" (200mm x 200mm) mounting kit designed for flat-panel TVs (sold separately). Mount this unit according to the directions included with the mounting kit.

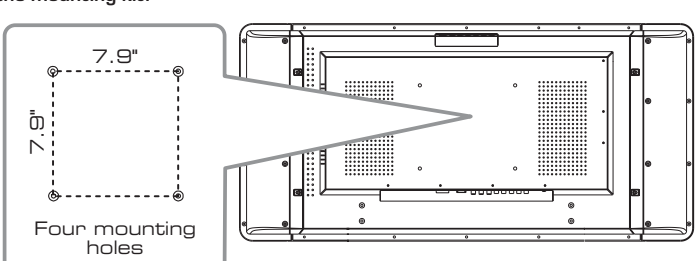

USING HEADPHONES

- Turn down the volume before connecting headphones to the unit, then adjust the volume to your desired level.
- When headphones are connected, no sound will come from the front speakers.

Note:
- Avoid listening to sound at high levels for prolonged periods of time. This may be harmful to you and may cause hearing loss.

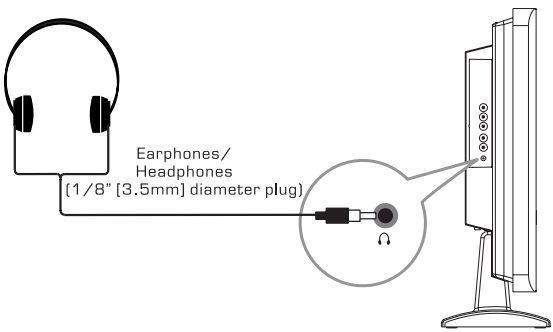

MAIN MENU

1. Press the **INPUT** button.
2. Use ▲ or ▼ button to select the options **(AV1, AV2, YUV1, YUV2, PC IN)** . The screen will change to your desired setting.

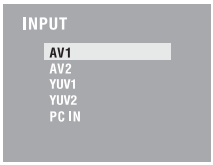

PICTURE MENU

1. Press the **MENU** button.
2. Use ▲ or ▼ button to select the **Picture** menu.
3. Use ▲, ▼, ◄ or ► button to select the options **(Picture Mode , Contrast, Brightness, Saturation, Sharpness, Hue & Color Temp)** and adjust them using the ◄ or ► buttons. (The screen will change to your desired setting).
4. Repeat step 3 to adjust other options.
5. Press the OK button to return to normal screen, press the **MENU** button to exit menu.

Note : You can also select simply by pressing the **PICTURE** button.

• **Picture Mode** : Select from preset screen display settings to match the type of show you are watching (Natural, Bright, Soft & Personal).

When you select the Picture mode to Personal, the options below will be displayed.

• **Contrast** : Adjust to sharpen the picture quality. The black portions of the picture become richer in darkness and the white become brighter.
• **Brightness** : Adjust to brighten the darkest parts of the picture.
• **Saturation** : Adjust the saturation of a color.
• **Sharpness** : Adjust the sharpness level to improve detail in the picture.
• **Hue** : Adjust the hue of the picture. (Toward purple / Toward green)
• **Color Temp** : Adjust the three color temperature of the picture. Select Normal (balanced) / Warm (red white)/Cool (blue white) mode.

In PC IN mode

When you select the Picture mode to Personal, the options of Contrast and Brightness will be displayed.

The color temperature setting options will be shown Normal (balanced)/Warm (red white)/Cool (blue white)/User (Color-R, Color-G, Color-B). Contrast and brightness settings operate only.

• Resolution : 1280 x 1024 max
• Refresh Frequency : 75Hz max

AV1/AV2/YUV1/ YUV2 mode

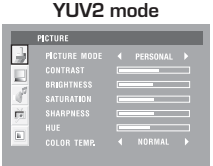

PC IN mode

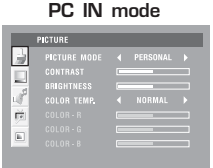

MENU SETUP

SCREEN MENU

1. Press the **MENU** button.
2. Use ▲ or ▼ button to select the **Screen** menu.
3. Use ▲, ▼, ◄ or ► button to select the options **(Size mode, DLC mode, H-Position, V-Position, Clock, Phase, Auto Adjust)** and adjust them using the ◄ or ► buttons. (The screen will change to your desired setting).
4. Repeat step 3 to adjust other options.
5. Press the OK button to return to normal screen, press the **MENU** button to exit menu.

- **Size mode** :
  To select the picture format which best corresponds to your viewing requirements.

  Full –> Normal –> Zoom 1 –> Zoom 2

  Note : You can also select simply by pressing the **FORMAT** button.

- **DLC mode (Dynamic Light Control Mode)** :
  To adjust the brightness of the screen automatically.

In PC IN mode

- **Size mode** : Select the picture format to 'Full' & 'Normal'.
- **H-position** : Center the image by moving it left or right.
- **V-position** : Center the image by moving it up or down.
- **Clock** : Adjusts when the image flickers with vertical stripes.
- **Phase** : Adjusts when characters have low contrast or when the image flickers.
- **Auto Adjust** : Adjusts when characters have low contrast or when the image flickers automatically.

AV1/AV2/YUV1/ YUV2 mode

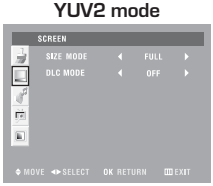

PC IN mode

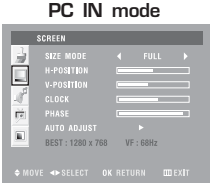

SOUND MENU

1. Press the **MENU** button.
2. Use ▲ or ▼ button to select the **Sound** menu.
3. Use ▲, ▼, ◄ or ► button to select the options **(Sound mode, Bass, Treble & Balance)** and adjust them using the ◄ or ► buttons. (The screen will change to your desired setting).
4. Repeat step 3 to adjust other options.
5. Press the OK button to return to normal screen, press the **MENU** button to exit menu.

Note : You can also select simply by pressing the **SOUND** button.

Experiment with different sound settings until you find the settings you prefer.

- **Sound mode** : Select from preset sound settings (Normal, News, Music, Movie, Personal) to match the type of show you are watching.
- **Balance** : Adjust the balance level toward the left or right speakers.

When you select the Sound mode to Personal, the options below will be displayed.

- **Bass** : Adjust the bass range.
- **Treble** : Adjust the treble range.

AV1/AV2/YUV1/
YUV2/PC IN mode

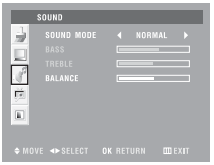

MENU SETUP

SETUP MENU

1. Press the **MENU** button.
2. Use ▲ or ▼ button to select the **Set up** menu.
3. Use ▲, ▼, ◄ or ► button to select the options **(Restore setting, Sleep timer, Parental control, Close caption, Noise reduce)** and adjust them using the ◄ or ► buttons. (The screen will change to your desired setting).
4. Repeat step 3 to adjust other options.
5. Press the OK button to return to normal screen, press the **MENU** button to exit menu.

AV1/AV2 mode

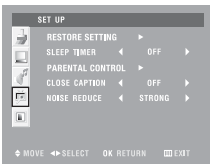

YUV1/YUV2/ PC IN mode

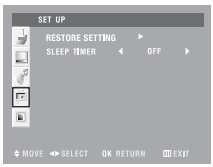

RESTORE SETTING

If you reset the AV to the factory settings, all your present settings on picture & sound will be erased and replaced by the factory's default settings. However, picture setting in PC mode and parental setting will not be erased.

1. Press the **MENU** button.
2. Use ▲ or ▼ button to select the **Set up** menu, and then press ◄ or ► button to enter.
3. Use ▲ or ▼ button to select the option of RESTORE SETTING and then press ◄ or ► button to set 'ON' for high detail in black portions.

TIMERS SETTING

To select the sleep timer to turn off the unit automatically.

1. Press the **MENU** button.
2. Use ▲ or ▼ button to select the **Set up** menu, and then press ◄ or ► button to enter.
3. Use ▲ or ▼ button to select **Sleep timer**.
4. Use ▲, ▼, ◄ or ► button to select the number of minutes **(Off –> 5Min –> 10Min –> 15Min –> 30Min –> 45Min –> 60Min).**
5. Press the OK button to return to normal screen, press the **MENU** button to exit menu.

Note : You can also select simply by pressing the **SLEEP** button.

PARENTAL CONTROL

1. Press the MENU button.
2. Use ▲ or ▼ button to select the **Set up** menu.
3. Use ▲, ▼, ◄ or ► button to select the **Parental control** and then press ► button to confirm.
4. Enter a 4-digit lock code. Once entered, the screen will enter the Parental menu. The factory preset lock code is " ▲ ► ▼ ◄ ".

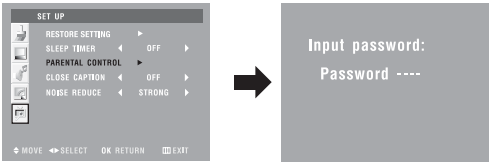

5. Use ▲, ▼, ◄ or ► button to select the options **(Change, V-chip, TV rating, Movie rating)** and adjust them using the ◄ or ► buttons.
6. Use ▲ or ▼ button to select the **Change** and then press ► button to change the password . (Note : Only press ▲ ► ▼ ◄ & OK button to set the password, other button is not available.)
7. Press the MENU button to return to normal screen.

Note : In AV1 & AV2 mode only, this option is available.

If you forget the password,
enter " ▲ ► ▼ ◄ " to unlock parental control.

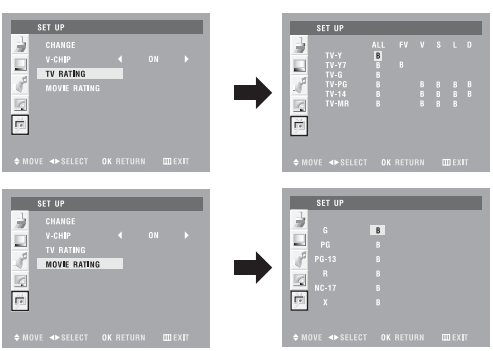

TV Rating

TV-Y : Suitable for children ages 2-6.
TV-Y7 : Suitable for children ages 7 and above.
TV-G : Suitable for all ages.
TV-PG : Parental guidance suggested.
TV-14 : Parents strongly cautioned.
TV-MR : Mature audience only.

Move Rating

G : General audiences.
PG : Parental guidance suggested.
PG-13 : Parents strongly cautioned.
R : Restricted.
NC-17 : No one 17 and under admitted.
X : X is an older rating that is unified with NC-17 but may be encoded in the data of older movies.

MENU SETUP

CLOSED CAPTIONING

Allows conversations, narration, and sound effects in home videos to be viewed as captions on the screen.

1. Press the **MENU** button.
2. Use ▲ or ▼ button to select the **Setup** menu, and then press ◄ or ► button to enter.
3. Use ▲ or ▼ button to select the **Close caption**.
4. Use ◄ or ► button to select the options **(OFF, CC1 –> CC4, TEXT 1 –> TEXT 4, CC1MUTE, XDS)** and adjust them using the ◄ or ► buttons. (The screen will change to your desired setting)
5. Press the OK button to return to normal screen, press the **MENU** button to exit menu.

Note : In AV1 & AV2 mode only, this option is available.

Note :

- The Closed Captioning broadcasts can be viewed in two modes : CAPTION and TEXT. For each mode, four channels are available :

CC1 : Caption mode for CH1 data	TEXT1 : Text mode for CH1 data
CC2 : Caption mode for CH2 data	TEXT2 : Text mode for CH2 data
CC3 : Caption mode for CH3 data	TEXT3 : Text mode for CH3 data
CC4 : Caption mode for CH4 data	TEXT4 : Text mode for CH4 data

- If you select CC1MUTE, the sound will be muted and the captions will appear automatically when you press the **MUTE** button. Press the MUTE button again to turn on the sound and the captions will disappear. Select XDS to extend data services.
- Press the **CC** button to directly turn on CLOSED CAPTIONING .

NOISE REDUCTION

1. Press the **MENU** button.
2. Use ▲ or ▼ button to select the **Set up** menu, and then press ◄ or ► button to enter.
3. Use ▲ or ▼ button to select **Noise reduce**.
4. Use ◄ or ► button to select the options **(Strong, Off, Weak)** and adjust them using the ◄ or ► buttons. (The screen will change to your desired setting).
5. Repeat step 3 to adjust other options.
6. Press the OK button to return to normal screen, press the **MENU** button to exit menu.

Note : In AV1 & AV2 mode only, this option is available.

ON SCREEN DISPLAY SETTING

1. Press the **MENU** button.
2. Use ▲ or ▼ button to select the **OSD** menu, and then press ◄ or ► button to enter.
3. Use ▲ or ▼ button to select the options **(Language, OSD h-position, OSD v-position, Duration, Halftone)** and adjust them using the ◄ or ► buttons. (The screen will change to your desired setting).
4. Repeat step 3 to adjust other options.
5. Press the OK button to return to normal screen, press the **MENU** button to exit menu.

Note:

- **Language** :
  Select from English/Français/Español.
- **OSD h-position** :
  Move the picture of setup menu left or right.
- **OSD v-position** :
  Move the picture setup menu up or down.
- **Duration** :
  Select the time of setup menu on screen (Always -> 15S -> 30S -> 45S -> 60S).
- **Halftone** :
  To change the tone on the picture of setup menu.

TROUBLE SHOOTING GUIDE

SYMPTOM	CAUSE (AND REMEDY)
No power.	• Ensure that the AC power cord is connected. • Turn on the unit.
The remote does not function.	• Remove any obstacles between the remote and the unit. • Use the remote near the unit. • Point the remote at the remote sensor on the unit. • Replace the battery in the remote with a new one.
No sound.	• Increase the volume. • Check whether the mute function has been activated on the Remote Control.
Black and white picture.	• Check the Picture setting within the Setup menu. • Check to make sure the program you are watching is broadcast in Color and not Black & White.
No picture or sound.	• Make sure the unit is plugged in and turned on. • Increase the volume. • Make sure the audio/video source device is working properly. • Make sure all cables are connected firmly.
Colored patches of picture.	• Make sure there are no unshielded electrical devices nearby that are causing interference. • Turn the unit off for 30 minutes, then try it again.

Printed in China
811-173291-011